

## Bushing Information

### Removing Fan Wheel

Location of hardware differs depending on hub configuration in **Figure 43 on page 51**. Refer to **Figure 42** for details on removing fan wheel from motor shaft.

1. Loosen set screw on bushing (excludes fan wheels that use H bushing).
2. Remove mounting bolts from bushing.
3. There are threaded holes provided on the bushing. These holes are used for removing the bushing. Using mounting bolts from previous step; slowly thread bolts into threaded holes in the bushing. Alternate tightening bolts after each full turn.
4. Continue until fan wheel can be removed by hand.
5. Remove mounting bolts on motor and remove motor shaft from fan wheel.

**Figure 42 - Fan Wheel Removal from Motor Shaft**

